

1 Deploying PLATINUM Firmware onto Unit

1. Copy the un-zipped **image.bin** file to a thumb drive's root directory.
2. Power up the UUT and verify that you see the word "bSER." If the unit displays "OPER" this means that the unit has been previously programmed. Go to the next section for details on how to upgrade the firmware through the menu. Continue onto the next step if the unit has not been previously programmed.
3. Insert the thumb drive with the image.bin, within a couple of minutes you should see "bUSB" flicker, this will indicate that the upgrade is in progress.
4. Once the upgrade is done, the word "OPER" will appear on the display.
5. Navigate to INIT->VER.N and hit enter to view the version number to verify that it is correct.

1.1 Upgrading Firmware

1. Starting from OPER hit the right arrow key until you see "INIT" then hit enter.
2. Hit the right arrow until you see VER.U then hit enter.
3. When prompted with "ok ?" hit enter within a few seconds you will see "b.001" appear on the screen.
4. The "b.001" will flicker indicating that the upgrade is done, once it is finished the word "OPER" will appear on the screen.
5. Navigate to INIT->VER.N and hit enter to view the version number to verify that it is correct.