

5

CONFIGURING THE OUTPUT (continued)


MOdE ENTER OUTPUT MODE CONFIGURATION SUBMENU:
Press 'RESET/ENTER'

5) Display shows "StORed"
stored message momentarily and advances to "MOdE" to allow users to select Output type as Voltage (0-10Vdc or Current (4-20mA-dc) source.
6) Display flashes "VOLT" (default) DC-Voltage output option or previous selection ("CURRNt" DC-Current output).

Press 'RESET/ENTER'

Out.tyP ENTER OUTPUT TYPE CONFIGURATION SUBMENU:
Press 'RESET/ENTER'

7) Display shows "Out.tyP" Output Type Submenu.

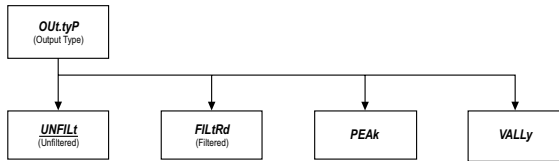

Press 'RESET/ENTER'

8) Display flashes "UNF ILt" Unfiltered option or previous selection.


Press '▲/MAX'

9) Scroll though and select the following options for your choice of setting:

- "UNF ILt": Transmits the unfiltered value of your signal input.
- "FILtRd": Transmits the filtered value of your signal input.
- "PEAK" : Transmits the recorded Peak "HI RdG" Reading value(s).
- or "VALLy": Transmits the recorded Valley"LO RdG" Reading value(s).

SETTING OUTPUT SCALE AND OFFSET

OT.SC.OF ENTER OUTPUT SCALE & OFFSET CONFIGURATION SUBMENU:



REAd 1 (READING 1)

Press 'RESET/ENTER'

10) Display shows "REAd 1" Reading 1 menu.

Press 'RESET/ENTER'

11) Display flashes 1st digit of previous "Reading 1" value.

Press '▲/MAX' & '▶/MIN'

12) Enter "Reading 1" value. (Example 000000).

Press 'RESET/ENTER'

13) Display advances to "Out 1" Output 1 menu.

6

SETTING OUTPUT SCALE AND OFFSET (continued)

Out 1 (OUTPUT 1)

Press 'RESET/ENTER'

14) Display flashes 1st digit of previous "Out 1" value.

Press '▲/MAX' & '▶/MIN'

15) Enter "Out 1" value. (Example 0000.00).

Press 'RESET/ENTER'

16) Display advances to "REAd 2" Reading 2 menu.

REAd 2 (READING 2)

Press 'RESET/ENTER'

17) Display flashes 1st digit of previous "Reading 2" value.

Press '▲/MAX' & '▶/MIN'

18) Enter "Reading 2" value. (Example 999999).

Press 'RESET/ENTER'

19) Display advances to "Out 2" Output 2 menu.

Out 2 (OUTPUT 2)

Press 'RESET/ENTER'

20) Display flashes 1st digit of previous "Out 2" value.

Press '▲/MAX' & '▶/MIN'

21) Enter "Out 2" value. (Example 0010.00).

Press 'RESET/ENTER'

22) Display shows "StORed" stored message momentarily and then advances to the "SP CNF" SetPoint Configuration menu.

Note

The above example is for 0-10 V of the entire range of the process input and analog output. For 0-20mA output you need to set "MOdE" to "CURRNt" DC-Current output and "Out 2" to 0020.00.

SPECIFICATIONS

Analog Output:

0-5 V, 1-5 V, 0-10 V, 0-20 mA, 4-20 mA level; 14-bit resolution; 0.1% accuracy; 6 msec step response.

Isolation:

Power to Input / Analog, Comm, Ethernet, & Relay Output: 2500 Vac per 1 min. test
 Relays to Inputs / Analog, Comm, & Ethernet Outputs: 2500 Vac per 1 min. test
 Ethernet to Inputs / Analog Outputs: 1500 Vac per 1 min. test
 Between Inputs / Analog & Comm Outputs: 500 Vac per 1 min. test

WARNING: These products are not designed for use in, and should not be used for, patient connected applications.



This device is marked with the international caution symbol. It is important to read the Setup Guide before installing or commissioning this device as it contains important information relating to safety and EMC.

It is the policy of NEWPORT to comply with all worldwide safety and EMC/EMI regulations that apply. NEWPORT is constantly pursuing certification of its products to the European New Approach Directives. NEWPORT will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but NEWPORT Electronics, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

TRADEMARK NOTICE:

NEWPORT, **NEWPORT**, **newportUS.com**, **INFINITY**, and the "Meter Bezel Design" are trademarks of NEWPORT Electronics, Inc.

OPERATION MANUAL



THE NEW STANDARD FOR QUALITY

INF-B
Isolated Analog Output Option

For immediate technical or application assistance please call:

1-800-6397678
1-800-NEWPORT

Newport Electronics, Inc.
 2229 South Yale Street • Santa Ana, CA • 92704 • U.S.A.
 TEL: (714) 540-4914 • FAX: (714) 546-3022
 Toll Free: 1-800-639-7678 • <http://www.newportUS.com> • e-mail: info@newportUS.com
 ISO 9001 Certified

Newport Technologies, Inc.
 976 Bergar • Laval (Quebec) • H7L 5A1 • Canada
 TEL: (514) 335-3183 • FAX: (514) 856-6886
 Toll Free: 1-800-639-7678 • <http://www.newport.ca> • e-mail: sales@newport.ca

Newport Electronics, Ltd.
 One Omega Drive • River Bend Technology Centre
 Northbank, Irlam • Manchester M44 5BD • United Kingdom
 Tel: +44 161 777 6611 • FAX: +44 161 777 6622
 Toll Free: 0800 488 488 • <http://www.newportuk.co.uk> • e-mail: sales@newportuk.co.uk

Newport Electronics B.V.
 Postbus 8034 • 1180 LA Amstelveen • The Netherlands
 TEL: +31 20 3472121 • FAX: +31 20 6434643
 Toll Free: 0800 0993344 • <http://www.newport.nl> • e-mail: sales@newport.nl

Newport Electronics spol s.r.o.
 Rudá armády 1868, 733 01 Karviná 8 • Czech Republic
 TEL: +420 69 6311899 • FAX: +420 69 6311114
 Toll Free: 0800-1-66342 • <http://www.newport.cz> • e-mail: sales@newport.cz

Newport Electronics GmbH
 Daimlerstrasse 26 • D-75392 Deckenpfronn • Germany
 TEL: 49 7056 9398-0 • FAX: 49 7056 9398-29
 Toll Free: 0800 / 6397678 • <http://www.newport.de> • e-mail: sales@newport.de

Newport Electronique S.A.R.L.
 11, rue Jacques Cartier • 78280 Guyancourt • France
 TEL: +33 1 61 37 29 00 • FAX: +33 1 30 57 54 27
 Toll Free: 0800 466 342 • <http://www.newport.fr> • e-mail: sales@newport.fr

Mexico and Latin America
 TEL: 001-800-826-6342 • FAX: 001 (203) 359-7807
 En Español: 001 (203) 359-7803

NEWPORTnet™ On-Line Service www.newportUS.com
Internet e-mail info@newportUS.com



Warranty/Disclaimer

NEWPORT Electronics, Inc. warrants this unit to be free of defects in materials and workmanship for a period of **one (1) year** from the date of purchase. In addition to NEWPORT's standard warranty period, NEWPORT Electronics will extend the warranty period for **four (4) additional years** if the warranty card enclosed with each instrument is returned to NEWPORT.

If the unit malfunctions, it must be returned to the factory for evaluation. NEWPORT's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by NEWPORT, if the unit is found to be defective, it will be repaired or replaced at no charge. NEWPORT's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of NEWPORT's control. Components which wear are not warranted, including but not limited to contact points, fuses, and triacs.

NEWPORT is pleased to offer suggestions on the use of its various products. However, NEWPORT neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by NEWPORT, either verbal or written. NEWPORT warrants only that the parts manufactured by it will be as specified and free of defects.

NEWPORT MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED.

LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of NEWPORT with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall NEWPORT be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by NEWPORT is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, or used on humans, or misused in any way, NEWPORT assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally purchaser will indemnify NEWPORT and hold NEWPORT harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

Return Requests/Inquiries

Direct all warranty and repair requests/inquiries to the NEWPORT Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO NEWPORT, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM NEWPORT'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR WARRANTY RETURNS, please have the following information available BEFORE contacting NEWPORT:

1. P.O. number under which the product was PURCHASED.
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR NON-WARRANTY REPAIRS, consult NEWPORT for current repair charges. Have the following information available BEFORE contacting NEWPORT:

1. P.O. number to cover the COST of the repair.
2. Model and serial number of product, and
3. Repair instructions and/or specific problems relative to the product.

NEWPORT's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.
 NEWPORT is a registered trademark of NEWPORT Electronics, Inc.
 © Copyright 2002 NEWPORT Electronics, Inc. All rights reserved.
 This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without prior written consent of NEWPORT Electronics, Inc.

PATENT NOTICE: This product is covered by one or more of the following patents: U.S. Pat. No. Des. 336,895; 5,274,577; 6,243,021 / CANADA 2052599; 2052600 / ITALY 1249456; 1250938 / FRANCE BREVET No. 91 12756 / SPAIN 2039150; 2048066 / UK PATENT No. GB2 249 837; GB2 248 954 / GERMANY DE 41 34398 C2. OTHER INTERNATIONAL PATENTS PENDING.

Start Here

FEATURES OVERVIEW

1. Precise analog levels are generated from digital code using a 14-bit DAC chip.
2. Voltage (to 10 V) is available at the same time as current (to 22 mA), but the total current drawn should not exceed 24 mA.
3. Load resistance for the voltage output can be as low as 500 ohms (20 mA at 10 V out) when current output is not used.
4. Loop resistance for the current output can be as high as 600 ohms (12 volts compliance) with negligible current from the voltage output.
5. Both outputs are galvanically isolated from both power and measurement circuits of the meter.
6. Precision calibration is applied by the meter to either the voltage output or the current output (but not to both simultaneously). When both outputs are used simultaneously, the non-calibrated output is stable but does require external adjustment if fine-trimming is required.
7. Independent, 14-bit resolution OuTput SCale and OffSet (OT.SC.OF) can convert a wide range of meter readings to the desired current or voltage output span.
8. The output resolution permits good accuracy for turndown ratios (offset/span) as high as 100:1.
9. 50° to 104°F (10° to 40°C) accuracy within 0.1% after installation calibration.
10. 10% to 90% step response time is 6 milliseconds (plus filter delay, if any, programmed for the analog output).
11. Configurable so that output will track the PEAK or VALLEY measurement.

BOARD INSTALLATION

To install optional Analog Output printed circuit board:

1. Refer to "Reveal the Main Board" in Main Operator's Manual **Section 5.2**, Disassembly.
2. Using figure below as a reference, insert analog option board(s) into J12 connector on the main board.



WARNING: To avoid electrical shock be sure to disconnect the unit from its power supply. After you have opened the meter you are ready to install option card.

2

BOARD INSTALLATION (continued)

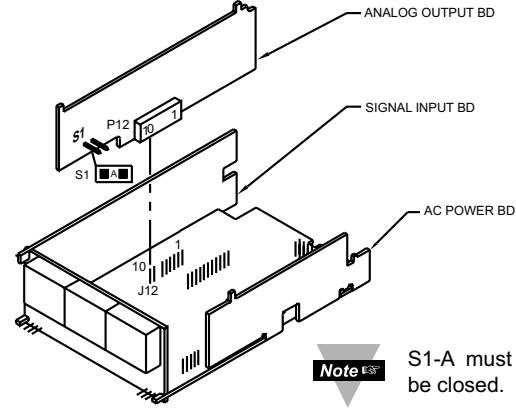


Figure 1. Board Installation

WIRING CONNECTIONS



WARNING: Do not connect ac power to your meter until you have completed all input and output connections. Failure to do so may result in injury! This device must only be installed electrically by specially trained electrician with corresponding qualifications.

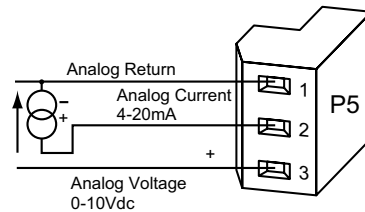


Figure 2. Analog Output Option Board Wiring Connection

LOCKOUT (ACCESS SECURITY) CONFIGURATION MENU

- To prevent unauthorized tampering with the setup parameters, this instrument provides protection by requiring the user to enter the ID (Access Security) Code before allowing access any locked menu item on Main menu.
- The locked menu will be skipped and invisible during Menu Navigation, however Display will show the locked setpoint and value but editing mode is disabled (first digit is not flashing).
- Whether multiple or single menu accessibility/restriction desired, there is only one ID code needed.

3

LCK.CNF ENTER LOCKOUT (ACCESS SECURITY) CONFIGURATION SUBMENU:

Press **'MENU'**

Press **'RESET/ENTER'**

Press **'RESET/ENTER'**

Press **'▲/MAX'** & **'▶/MIN'**

- 1) Ten times, Display shows "Lck.CNF" Lockout (Access Security) Configuration Menu.
 - 2) Display shows "Id" Access Security ID menu.
 - 3) Display shows 4 numbers 0 (0000) with the first digit flashing.
 - 4) To enter Access Security ID code.
- The default code is any 4-digit number that has the sum of its 4 digits equal 10. For example 1234 is one of the default ID code since 1+2+3+4 = 10.
 - Use numbers that are easy for you to remember. If the ID Code is forgotten or lost, Call customer service with your serial number to access and reset to the default ID code.

Press **'RESET/ENTER'**

Press **'RESET/ENTER'**

Press **'▲/MAX'** & **'▶/MIN'**

LOCK

Press **'RESET/ENTER'**

Press **'RESET/ENTER'**

Press **'RESET/ENTER'**

- 1) Ten times, Display shows "Lck.CNF" Lockout (Access Security) Configuration Menu.
- 2) Display shows "Id" Access Security ID menu.
- 3) Display shows 4 numbers 0 (0000) with the first digit flashing.
- 4) To enter Access Security ID code.

- 5) Display shows "CHNG. Id" Change ID Code menu; which implies that the ID code, was just entered, is accepted otherwise the meter will return to "Id" ID Code menu and allows user enter the ID code again if the correct ID code still is not found for over 3 attempts then display shows "ERROR" and advances to "RUN" Run mode.

- 6) Display shows 4 numbers 0 (0000) with the first digit flashing.
- 7) To modify and enter new ID code if necessary, otherwise skip this menu by Press "RESET/ENTER" again.

- 8) Display shows "StORed" stored message momentarily and then advances to the "LOCK" Lockout menu.

- 9) Display shows "SP1" Setpoint 1 submenu. Use "MENU" button to regain accessibility or lockout the other following menu functions in the Main Menu: "SP2", "SP3", "SP4", "INPUT", "RdG.CNF", "INP.CNF", "MP.SC.OF", "OUT.CNF", "SP.CNF", "AL.CNF", "COMM" (If Communication Option Board installed), and "COLOR".

- 10) Display flashes "dISAbL" disable option or previous setting.

4

LOCK (continued)

Press **'▲/MAX'**

Press **'RESET/ENTER'**


- 11) Scroll and select "ENABLE" to lockout "Out.CNF" Output Configuration from any unauthorized modification or skip this menu, just Press "RESET/ENTER".
- 12) Display shows "StORed" stored message momentarily and then advances to the "SP.CNF" submenu.

CONFIGURING THE OUTPUT

Out.CNF ENTER OUTPUT CONFIGURATION MENU:

Press **'MENU'**

- 1) 5 times or scroll though main Menu until Display shows "Out.CNF" Output Configuration Menu.

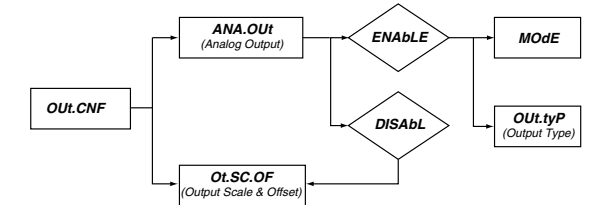

ANA.Out

Press **'RESET/ENTER'**

- 2) Display shows "ANA.OUT" Analog Output Configuration submenu.

Press **'RESET/ENTER'**

- 3) Display flashes "dISAbL" (Default) or previous setting option.

Press **'▲/MAX'**

- 4) Select "ENABLE" to setup Analog Output if your controller is equipped With the optional Analog Output board.

