

Humidity and Temperature Controllers

iSeries

all models shown
smaller than actual size.

iTH Series



- ✓ Output 1 - Humidity
Output 2 - Temperature
- ✓ High Accuracy $\pm 0.5^{\circ}\text{C}$
and $\pm 2\%$ RH
- ✓ 4 Popular DIN Sizes
- ✓ Ethernet and Serial
Communications
(optional)
- ✓ User-friendly, Simple
to Configure
- ✓ Full Autotune PID Control
- ✓ Choice of Relays, SSR,
DC Pulse, Analog Voltage
and Current
- ✓ Programmable Ramp and
Soak for Humidity and/or
Temperature
- ✓ RH/Temperature Probe
included

The NEWPORT® iTH Series instruments monitor and control both temperature and relative humidity. All meters and controllers in the series are high quality, highly accurate instruments featuring Newport's award-winning iSeries technology, uncompromising accuracy, backed by an extended 5-year warranty.

The instruments are simple to configure and use, while providing tremendous versatility and a wealth of powerful features.

The iTH Series instruments are available either as monitors or controllers. The monitors are extremely accurate programmable digital panel meters displaying humidity, temperature, or dew point. The controllers also provide single output control for humidity and temperature and are easily programmed for any control or alarming requirement from simple on-off to full autotune PID control.



The iTH family of meters and controllers are available in four true DIN sizes: the ultra compact $\frac{1}{32}$ DIN; the popular midsize $\frac{1}{16}$ DIN square bezel with dual display; the $\frac{1}{8}$ DIN vertical, and the $\frac{1}{8}$ DIN horizontal with the big bright 21 mm digits.

The iTH Series LED displays can be programmed to change color between **GREEN**, **AMBER**, and **RED** at any setpoint or alarm point.

The iTH controller models offer a choice of 2 control or alarm outputs in almost any combination: solid state relays (SSR); form "C" SPDT (single pole double throw) relays; pulsed 10 Vdc output for use with an external SSR; or analog output selectable for control or retransmission of the process value.

The networking and communications options (highly recommended) include direct Ethernet LAN connectivity with an embedded Web server, and serial communications. The C24 serial communications option includes both RS232 and RS485. Protocols include both MODBUS® and a straightforward ASCII protocol. The C4EIT option includes both Ethernet and RS485 ASCII/MODBUS on one device.

The iTH Series meters and controllers are designed for easy integration with popular industrial automation, data acquisition and control programs as well as Microsoft Visual Basic and Excel. Newport provides free configuration software which makes it fast and easy to get up and running. Available for download on the Web.

Specifications

Control

Action: Reverse (heat) or direct (cool)
Modes: Time and amplitude proportional control modes; selectable manual or auto PID, proportional, proportional with integral, proportional with derivative with anti-reset windup and ON/OFF

Rate: 0 to 399.9 seconds

Reset: 0 to 3999 seconds

Cycle Time: 1 to 199 seconds; set to 0 for ON/OFF operation

Gain: 0.5 to 100% of span; setpoints 1 or 2

Damping: 0000 to 0008

Soak: 00.00 to 99.59 (HH:MM), or OFF

Ramp to Setpoint:

00.00 to 99.59 (HH:MM), or OFF

Autotune: Operator initiated from front panel for 1 input at a time only

Outputs

There are two physical outputs: Output 1 = RH, Output 2 = Temp Functions are set up as Outputs (PID or ON/OFF), or Alarms

Ordering output choices:

Relay: 250 Vac @ 3A or 30 Vdc @ 3A

(resistive load); Form C SPDT

SSR: 20 to 265 Vac @ 0.05 - 0.5A

(resistive load); continuous

DC Pulse: Non-Isolated; 10 Vdc

@ 20 mA (used with external SSR)

Analog Output (Output 1 only):

Non-Isolated, control or retransmission

0 to 10 Vdc or 0 to 20 mA; 500 ohm

max, accuracy is $\pm 1\%$ of FS

Control Output 1 and 2

Operation:

Action: Reverse (heat) or Direct (cool)

Modes: Time and Amplitude Proportional Control Modes; selectable Manual or Auto PID, Proportional, Proportional with Integral, Proportional with Derivative with Anti-reset Windup and ON/OFF

Alarm 1 and 2 (Programmable)

- 1) Alarms are used for color changing sequence of alarm status (visual alarm).
- 2) Alarm functions are active, in addition to the color changing functions, if Output 1 & 2 are (menu) disabled.
- 3) If Alarms are disabled, Output menus (PID or ON/OFF) are active. Color change is still active.

Operation: High/low, above/below, band, latch/unlatch, normally open/normally closed and process/deviation; front panel configurations

-AL Limit Alarm Version: Output 1 & 2 submenus used for PID are eliminated from menu. Color sequence based on alarm setpoints is still available.

Input

Relative Humidity Accuracy/Range:

- ±2% for 10 to 90%;
- ±3% for 5 to 10% and 90 to 95%
- ±4% for 0 to 5% and 95 to 100%

Hysteresis: ±1% RH

Non-linearity: ±3%

Temperature Accuracy/Range*:

- ±0.5°C for 5° to 45°C (±1°F for 41 to 113°F); up to ±1.5°C for -40° to 5°C and 45° to 124°C (up to ±2.7°F for -40° to 41°F and 113° to 255°F)

Resolution: 0.1%, 12-bit for RH; 0.1°C, 14-bit for temperature

Response Time: 8 seconds, tau 63% for RH; 5 to 30 seconds, tau 63% for temperature

* **Note:** Extended temperature range is for industrial probe only, the controller's operating temperature is 0 to 50°C.

Network and Serial Communications

(For Options -C24, -C4EIT, -EIT)

Ethernet: Standards compliance IEEE 802.3 10Base-T

Supported Protocols:

TCP/IP, ARP, HTTPGET

RS232/RS422/RS485: Selectable from menu; both ASCII and MODBUS protocol selectable from menu; programmable 300 to 19.2 K baud; complete programmable setup capability; program to transmit current display, alarm status, min/max, actual measured input value and status

RS485: Addressable from 0 to 199

Connection: Screw terminals

General

A/D Conversion: 12-bit RH and 14-bit temp

Reading Rate:

2 samples per sec max

Digital Filter: Programmable

Decimal Selection:

None, 0.1 for temp and humidity

Display: 4-digit, 9-segment LED

i32, i16D, i8DV: 10.2 mm (0.40")

i8: 21 mm (0.83")

i8DH: 10.2 mm (0.40") and 21 mm (0.83")

GREEN, AMBER, and RED

programmable colors for process variable, setpoint and temp units

Operating Temperature: 0 to 50°C

(32 to 122°F), 90% RH non-condensing


Protection:

i32, i16D: NEMA 4X (IP65) front bezel

i8DH, i8DV: NEMA 1 (IP23) front bezel

Power: Refer to ordering guide

No CE compliance above 60 Hz.

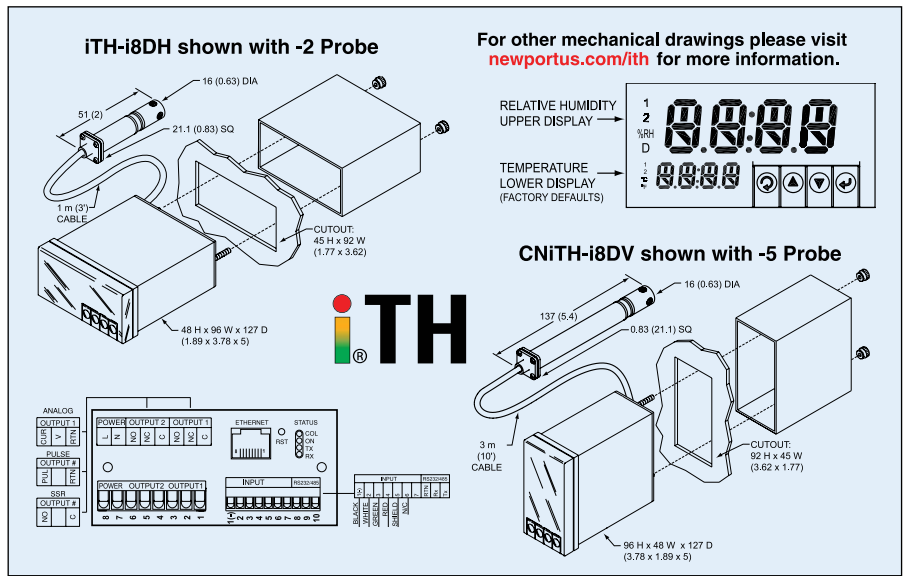

To Order Visit newportUS.com/ith for Pricing and Details

Model No.			Description
iTH-i8DH	(*)	(*)	Temperature and RH Input 1/8 DIN dual display horizontal
iTH-i8DV	(*)	(*)	Temperature and RH Input 1/8 DIN dual display vertical
iTH-i16D	(*)	(*)	Temperature and RH Input 1/16 DIN dual display
iTH-i32	(*)	(*)	Temperature and RH Input 1/32 DIN single display ^{*2}
Control Outputs			
	0	0	Monitor version, no control outputs
	2	2	2 solid state relays (SSR's): 0.5 A @ 120/240 Vac continuous
	2	3	SSR and relay: Form "C" SPDT 3A @ 120Vac, 3A @ 240 Vac
	2	4	SSR and pulsed 10 Vdc @ 20 mA (for use with external SSR)
	3	3	2 Relays: Form "C" SPDT 3 A @ 120 Vac, 3 A @ 240 Vac
	4	2	Pulsed 10 Vdc @ 20 mA (for use with external SSR) and SSR
	4	3	Pulsed 10 Vdc @ 20 mA (for use with external SSR) and relay
	4	4	2 pulsed 10 Vdc @ 20 mA (for use with external SSR)
	5	2	Analog output selectable as either control or retransmission of process value; 0 to 10 Vdc or 0 to 20 mA @ 500 ohm max & SSR
	5	3	Analog output 0 to 10 Vdc or 0 to 20 mA @ 500 ohm max & relay
	5	4	Analog out 0 to 10 Vdc or 0 to 20 mA @ 500 ohm max & pulse 10 V
			-AL limit alarm version (simplified menu; no PID control) ^{*1}
RH/Temperature Probe (Must Select One)			
	-2		51 mm (2") probe for iTH with 1 m (3') cable
	-5		127 mm (5") probe for iTH with 3 m (10') cable
Power Supply			
	*		Standard power input: 90 to 240 Vac ±10%, 50 to 400 Hz, 110 to 375 Vdc, equivalent voltage (*no entry required)
	-DC		Low voltage power option: 20 to 36 Vdc, 24 Vac ±10%; 12 to 36 Vdc, 24 Vac ±10% for iTH-i32
Network Options			
	-EIT		Ethernet with Embedded Web Server ^{*2}
	-C24		Isolated RS232 and RS485/422. 300 to 19.2k Baud
	-C4EIT		Ethernet with Embedded Web Server + Isolated RS485/422 hub for up to 31 devices ^{*2}
Accessories			
	OPC-SERVER LICENSE		OPC server/driver software license (Requires Network option)
	iTHP-2		51 mm (2") replacement probe for iTH with 1 m (3') cable
	iTHP-5		127 mm (5") replacement probe for iTH with 3 m (10') cable

^{*1} Analog output (Option 5) is not available with "-AL" units.

^{*2} "-C4EIT" or "-EIT" option is not available on the 1/32 DIN. Refer to the iServer section for other Ethernet devices that can connect to a iTH-i32.

Units can be powered safely with 24 Vac power, but no certification for CE/UL are claimed.

Ordering Examples: iTH-i8DH43-5-C4EIT is a horizontal 1/8 DIN dual display with pulse and relay outputs, a 5" probe and Ethernet with embedded Web server.

iTH-i16D00-2-EIT, 1/16 DIN dual display with a 2" probe and Ethernet with embedded Web server.